## 

## 

□□50mm-250mm□□□□□
1-5000000






Peel the backing paper off the loop tape.



Attach to the location where the wires need to be placed, and press the tape to stick firmly.

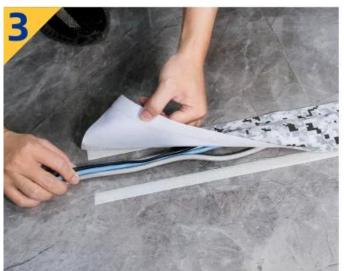

Open the cable cover by tearing off one of the hook side and put the wires inside.



After arranging the wires neatly, close the covers by attaching hook to loop.







or







High density neat and non stabbing hand short hook can be selected

Can also choose the traditional strong adhesion hook surface



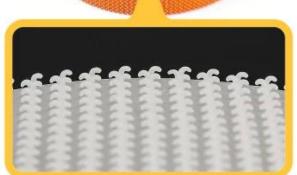

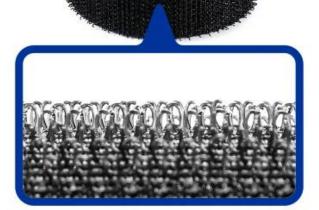



## **CONTACT INFORMATION**

:+80 20 34992808 +86 18026363923 TEL

: www.homecommoditysupplier.com Web

E-mail :sales02@balance-china.com

Address: No.2 Shengyuan Street, Beiliu Ind Park, Dagang Town, Nansha District, Guangzhou, Guangdong, China

Zip code: 511470