

Kabelbodenabdeckung

Produktdetail

Name	Kabelbodenabdeckung
Farbe	Rot, Orange, Schwarz, Blau, Tarnfarbe usw.
Länge	1-50 m, individuell anpassbar
Breite	50-250 mm, individuell anpassbar
Material	Nylon Polyester, kundenspezifisch
Verpackung	Polybeutel

Die Kabelbodenabdeckung ist eine praktische und einfache Möglichkeit, Kabel an Ort und Stelle zu halten und das Risiko zu minimieren, dass Kabel zu einer Stolper- oder Stromschlaggefahr werden. Der Bodenkabelschutz kann je nach Bedarf mit einer Schere zugeschnitten werden, wiederholt geöffnet und geschlossen werden, ohne Kleberückstände zu hinterlassen, leicht zu entfernen und zu reinigen, viele Male wiederverwendbar. Es eignet sich für geschlossene Teppiche und Büroteppiche und eignet sich gut für Böden unter Schreibtischen oder rund um den Boden.

PRODUCT DESCRIPTION



SECOND GENERATION

FLOOR CABLE COVER

Wires management orderly
tidy and not messy



Strong
adhesion



Can be cut
freely



Wear-resistant
and durable


Do you feel upset seeing the messy wires?

It will be ease and comfortable after using the wire cover



Before use

it is disorganized, wires are easy to trip and wear

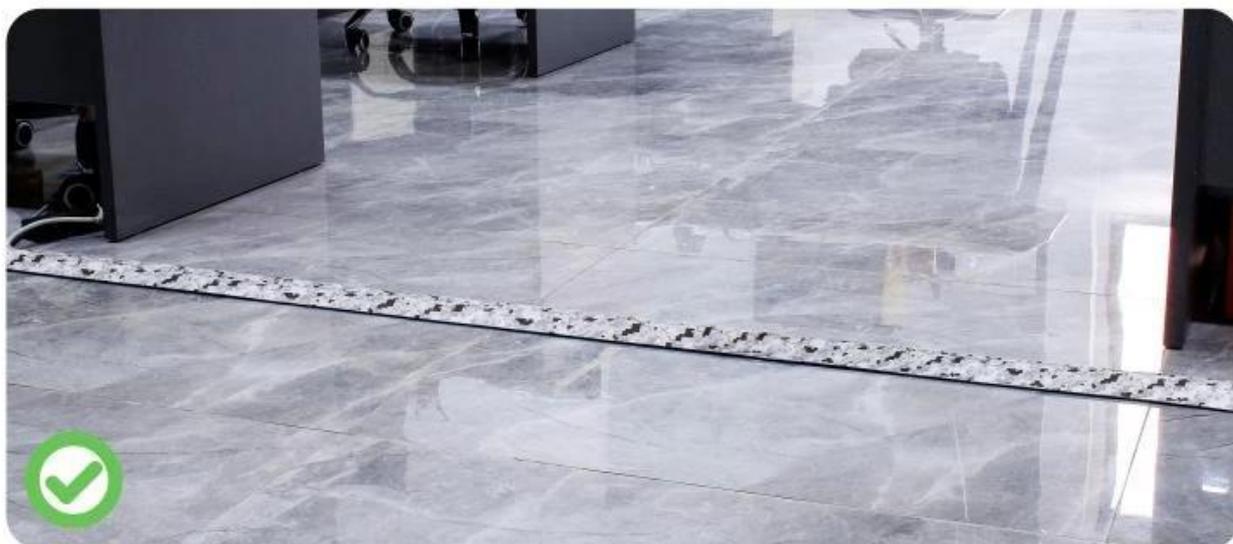

After use

it is neat and orderly, anti-stumbling, it protects the wires from fraying

The second generation wire cable sleeve cover has more complete functions and better use effect

Hook & loop type

Cover area

High density wear resistant material

Waterproof coating

Effectively block water leakage

Hook

Flat, high toughness and strong bite force

Loop

Fine nylon fabric tear-resistant and durable

Glue

Strong adhesion

**NO NEED TO DRILL
SIMPLE TO USE**



We can customize carpet cover of different widths and sizes in small quantities to cater to different scenes



5cm



8cm



10cm



11cm



13cm



15cm




Can be cut according to needs

WATERPROOF WITHOUT LEAKAGE




Strong drainage effect, no dripping

The new hook of the second generation is thinner after fitting, which is not easy to trip

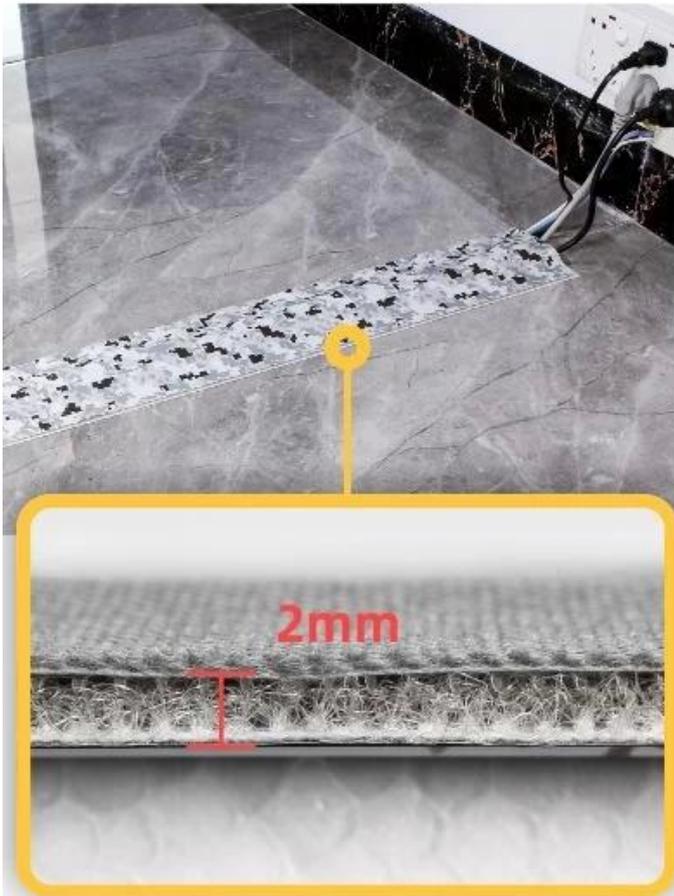

The height after bonding is about 2mm

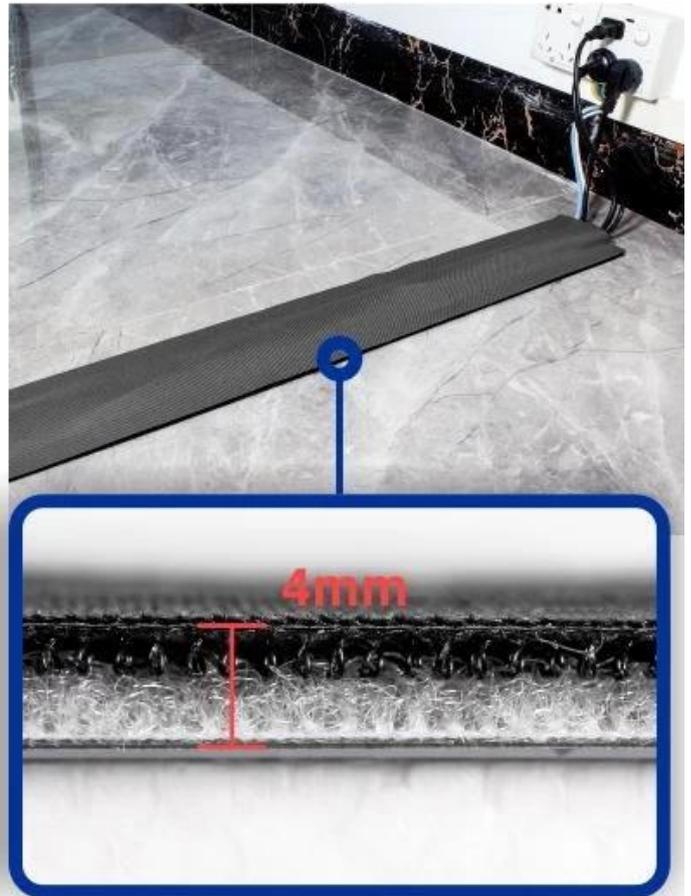

The height after bonding is about 4mm



1 Peel the backing paper off the loop tape.



2 Attach to the location where the wires need to be placed, and press the tape to stick firmly.



3 Open the cable cover by tearing off one of the hook side and put the wires inside.



4 After arranging the wires neatly, close the covers by attaching hook to loop.

Storage & Organization Applicable to a variety of scenarios



Home



Control room



Engineering



Office