






Peel the backing paper off the loop tape.



Attach to the location where the wires need to be placed, and press the tape to stick firmly.



Open the cable cover by tearing off one of the hook side and put the wires inside.

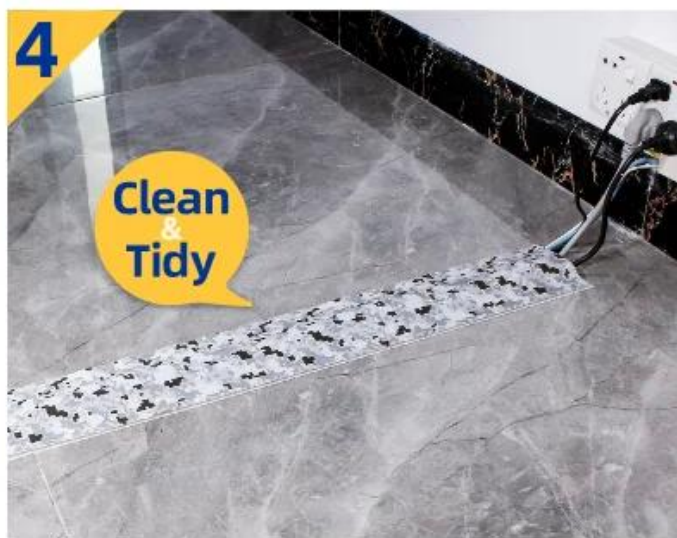

After arranging the wires neatly, close the covers by attaching hook to loop.

*New!*



**SECOND  
GENERATION**

**FLOOR CABLE COVER**

*New development of our company*



High density wear-resistant fabrics  
are more wear-resistant than traditional ones

**INJECTION  
HOOK TYPE**

**or**


**STANDARD  
HOOK TYPE**



High density neat and non  
stabbing hand short hook  
can be selected



Can also choose the  
traditional strong adhesion  
hook surface

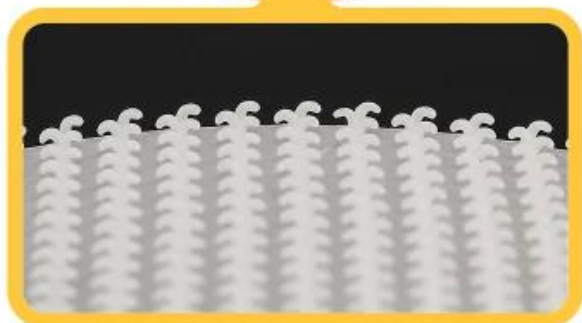

□□□□□□□□□□□□□□□□□□

# CUSTOM COLOR



More than a hundred of colors  
accept customization

**Camouflage**





## CONTACT INFORMATION

TEL : +80 20 34992808  
+86 18026363923

Web : [www.homecommoditysupplier.com](http://www.homecommoditysupplier.com)

E-mail : [sales02@balance-china.com](mailto:sales02@balance-china.com)

Address : No.2 Shengyuan Street, Beiliu Ind Park, Dagang Town,  
Nansha District, Guangzhou, Guangdong, China

Zip code: 511470