




Peel the backing paper off the loop tape.



Attach to the location where the wires need to be placed, and press the tape to stick firmly.



Open the cable cover by tearing off one of the hook side and put the wires inside.

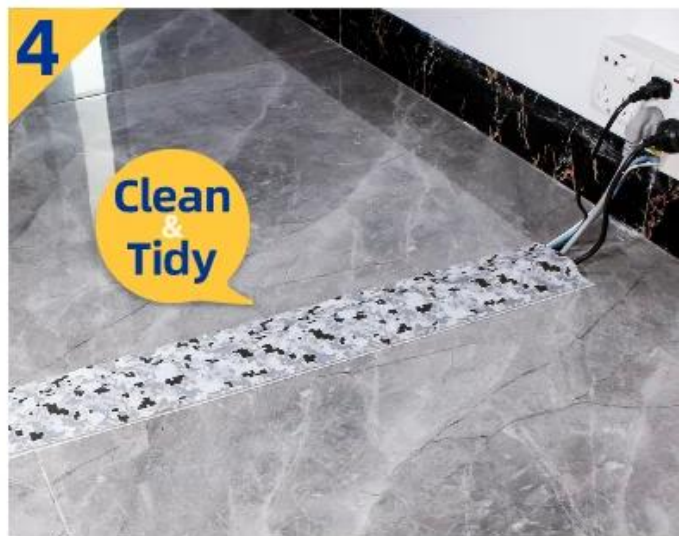

After arranging the wires neatly, close the covers by attaching hook to loop.

New!



**SECOND
GENERATION**

FLOOR CABLE COVER

New development of our company



High density wear-resistant fabrics
are more wear-resistant than traditional ones


INJECTION HOOK TYPE

or

STANDARD HOOK TYPE



High density neat and non
stabbing hand short hook
can be selected

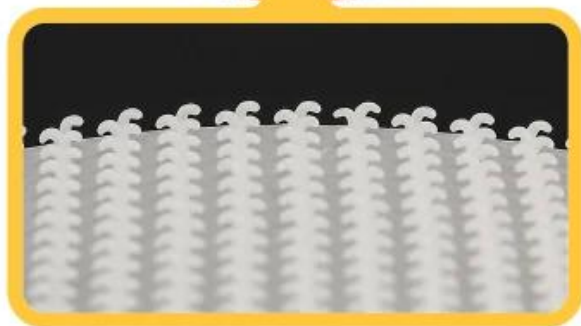

Can also choose the
traditional strong adhesion
hook surface



□□□ □□□ □□□ □□□□□□

CUSTOM COLOR



More than a hundred of colors
accept customization

Camouflage





CONTACT INFORMATION

TEL : +80 20 34992808
+86 18026363923

Web : www.homecommoditysupplier.com

E-mail : sales02@balance-china.com

Address : No.2 Shengyuan Street, Beiliu Ind Park, Dagang Town,
Nansha District, Guangzhou, Guangdong, China

Zip code: 511470